

MEDAIR air treatment unit

Open Machine Cover procedure

打开机器的门板--指引

1




拇指 A 向箭咀方向推, 拇指 B 向箭咀方向拉. According to the arrows direction, thumb A push and thumb B pull.

2




打开机器门板上方的两侧
Open the top of both sides of the cover

3

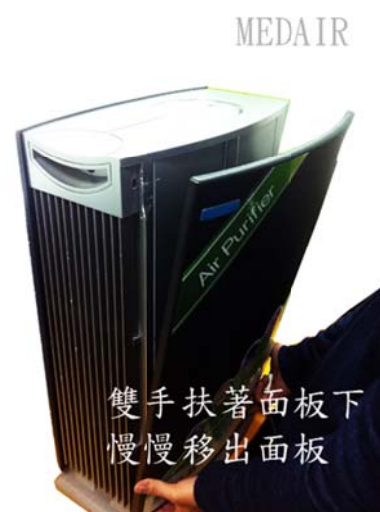

扶着面板的下方, 慢慢取出面板
Leaning on the bottom of the panel
and slowly take out the panel

4

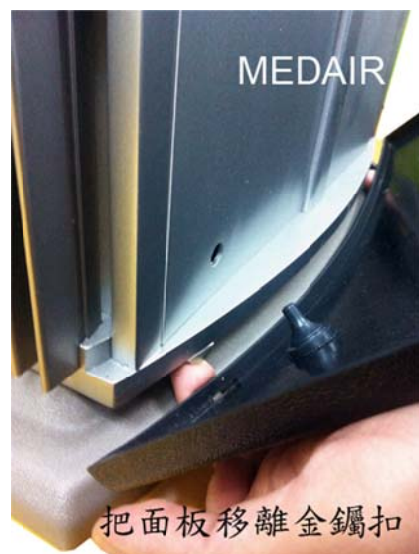

把面板移離金屬扣
The panel away from the metal buckle

5



取出橡皮塞
Remove the rubber stopper

6




取出主过滤仓
Take out the chamber

7



安裝門板，先裝上安裝橡皮塞
Install the rubber stopper

8

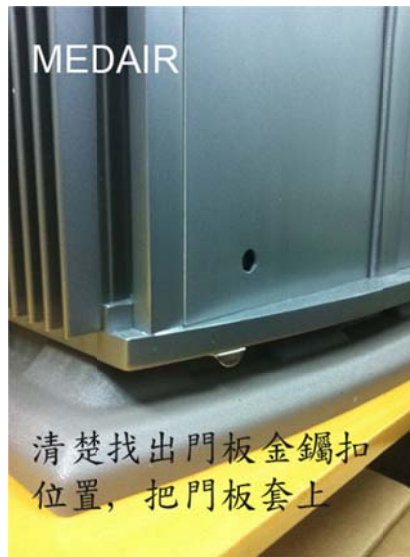

找出門板金屬扣的位置，把門板套上
Find out the metal buckle and install the panel.

9




把門板套上兩側金屬扣
直至金屬扣凸出可見
After installing panel, you can see the metal buckles.

10



把門板上方左右兩側金屬扣對準插入機身扣孔內，未完全插入孔前切勿過份用力強行推入
The two sides of the door above the metal clasp buckle holes align insert body, is not fully inserted into the hole before Do not push too hard to force

11

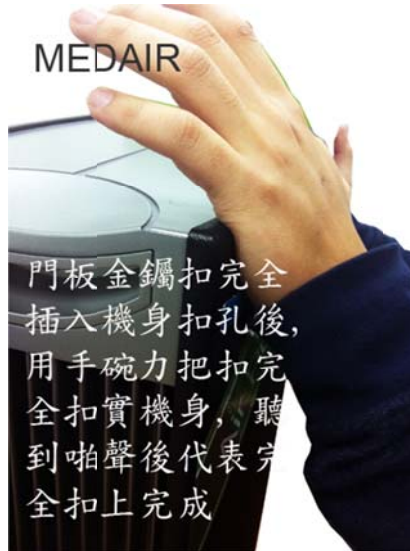

門板金屬扣完全插入機身扣孔後，用手碗力把扣完全扣實機身，聽到啪聲後代表完全扣上完成
After success installed, you hear sound "Pak", representatives fully engaged.

Remarks:

Make sure the machine cover has been well locked, the Safety Door Lock Switch has function normally, otherwise the machine can not be power on.

請確保門板已完全鎖上，門板電子安全鎖回復正常運作，否則此機之安全設計使之不能正常着機運作

www.medair.asia

